

# YachtSafe Manual Voltage monitor

W070 Voltage monitor



## iOS instructions

### Connect the alarm accessory to the G32 system via the app for iOS or Android:


IMAGE 1 Select Alarm accessories & Relay

IMAGE 2 Add & configure accessories

IMAGE 3 **iOS:** New accessory  
**Android:** Choose alarm accessory

IMAGE 4 Choose the accessory to connect. Enter a name for the accessory and then press Connect and follow the instructions.

**iOS:** After connection of the accessory, go to the tab Alarm accessories & Relay, press Update in the top right. Choose to activate/ Inactivate the alarm accessory by the button Edit in the top left. Choose your settings and press Save.

**Android:** After connection of the Alarm Accessory, go to the tab Alarm accessories & Relay, press Update. Choose to activate/inactivate the alarm accessory by the symbol  in the top right (press Edit). Choose your settings and press Save.

## Android instructions

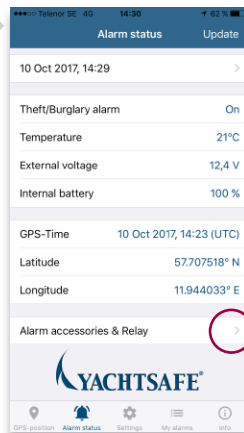


IMAGE 1

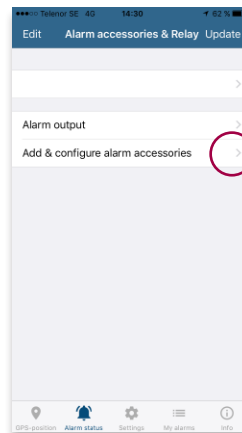


IMAGE 2

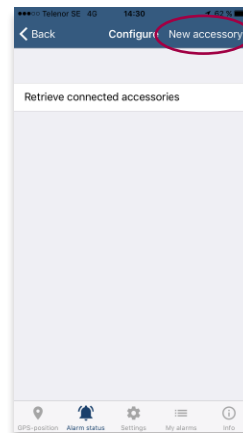


IMAGE 3





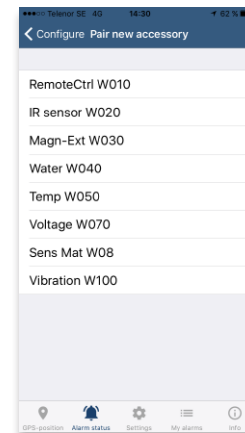



IMAGE 4

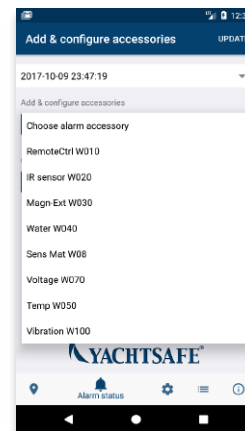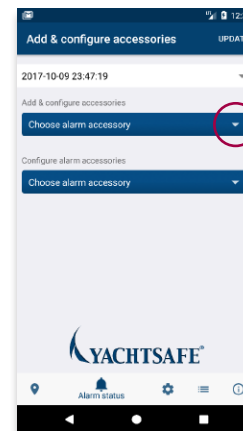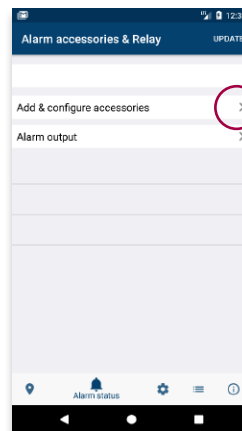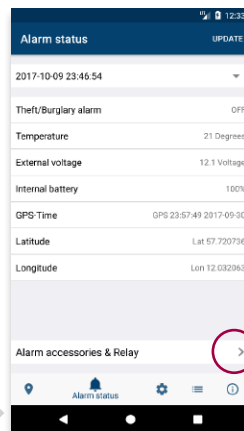

## Mounting

The voltage monitor is mounted in a normal wall outlet and is made for indoor environments. It sends an alarm when it's removed from the wall outlet.

The signal from the sensor part to the alarm unit will pass through walls and a big variety of materials.

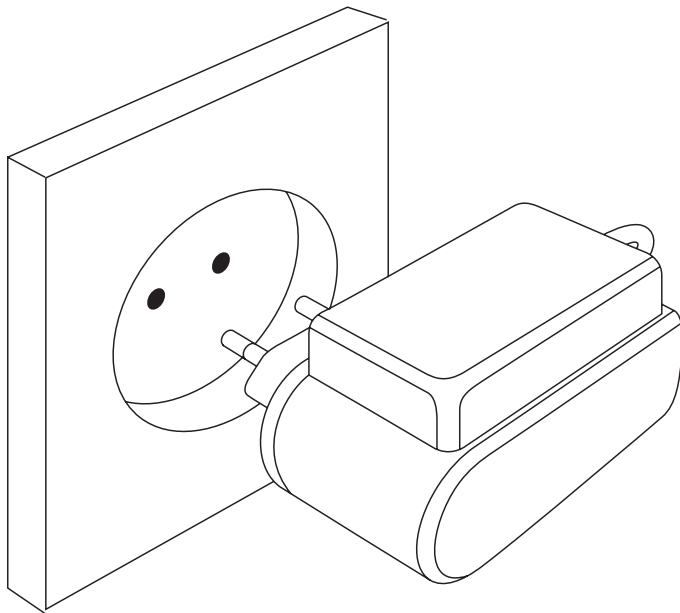

## Technical specifications

Measurements:	75 x 40 x 42 mm
Distance range (free sight):	approx 100 m
Temperature range:	-30 to 70°C

Additions or adjustments to this manual can be found at [www.yachtsafe.se](http://www.yachtsafe.se) under the Manuals tab.