

# YachtSafe Manual Remote control



W010 Remote control



## iOS instructions

### Connect the alarm accessory to the G31/G32 system via the app for iOS or Android:

IMAGE 1 Select Alarm accessories & Relay

IMAGE 2 Add & configure accessories

IMAGE 3 **iOS:** New accessory  
**Android:** Choose alarm accessory

IMAGE 4 Choose the accessory to connect. Enter a name for the accessory and then press Connect and follow the instructions.

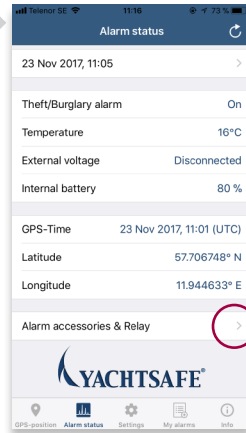


IMAGE 1

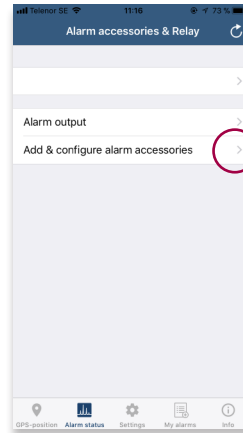


IMAGE 2

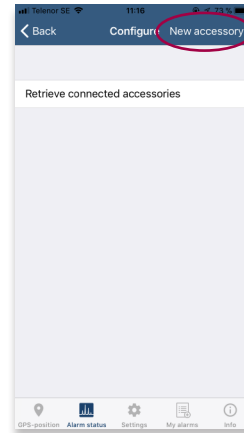


IMAGE 3



 


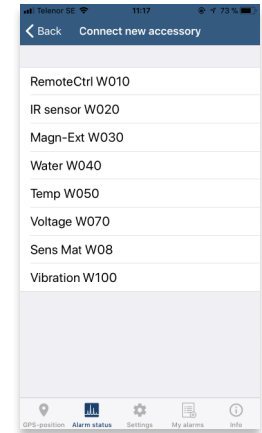


IMAGE 4

**iOS:** After connection of the accessory, go to the tab Alarm accessories & Relay, press Update in the top right. Choose to activate/ Inactivate the alarm accessory by the button Edit in the top left. Choose your settings and press Save.


**Android:** After connection of the Alarm Accessory, go to the tab Alarm accessories & Relay, press Update. Choose to activate/inactivate the alarm accessory by the symbol  in the top right (press Edit). Choose your settings and press Save.

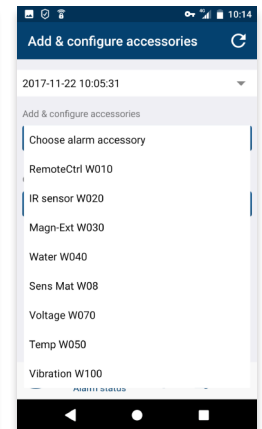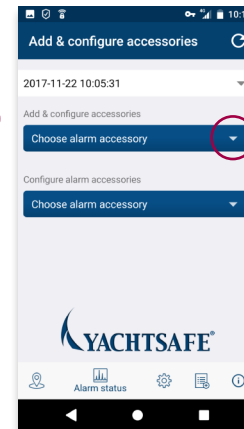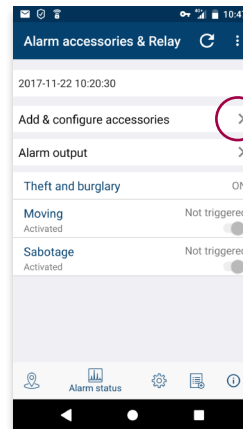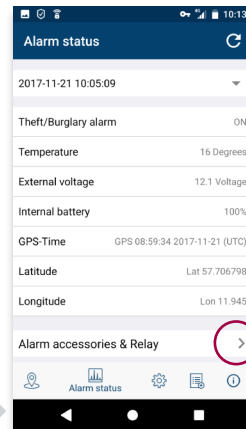

## Android instructions

## Mounting



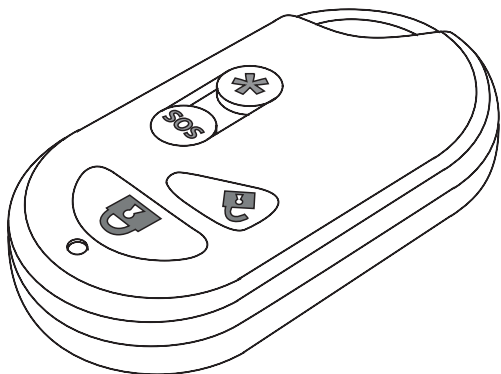

The main function of the remote control is to turn on and off the GPS-alarm. There is also a SOS button that activates an alert message with position information which is sent to the predefined alarm numbers. It's also possible to put the alarm unit in a low power consumption mode or control power of an external device, e.g. a heater or fridge in a boat. The communication between the remote control and the alarm unit is bidirectional. When the remote is flashing, it means that the command is sent and the alarm unit has received the key press. One or several remote controls can be used for the same alarm unit.



## Technical specifications

Measurements:	58 x 30 x 11 mm
Battery lifetime:	up to 3 years
Type of battery:	CR1632
Battery capacity:	130 mAh
Distance range (free sight):	approx 100 m
Temperature range:	-30 to 70°C
Sealing:	IP54

Additions or adjustments to this manual can be found at [www.yachtsafe.se](http://www.yachtsafe.se) under the Manuals tab.

-  Inactivate the alarm for theft and burglary.
-  Activate the alarm for theft and burglary.
-  Send a text message with the position of the alarm unit by holding the button down for three seconds.
-  This button has two different functions.
  - By pressing the button you can turn on or off the alarm unit's output (this can be used to control an external device, e.g. a heater or fridge). Valid only if the alarm unit's output is set as user control (off or on in App).
  - To switch to the low power consumption mode hold down the button for about 10 seconds until the LED-light is flashing once. You also receive a text message with status information to your predefined alarm numbers. To switch back you just hold down the button again for about 10 seconds until the light is flashing.